


# Brew Master 9000

## Hardware

### *Research and reference*

Iver Egge  
Kristoffer Dalby  
Johan Slettvoll  
Christer Lund

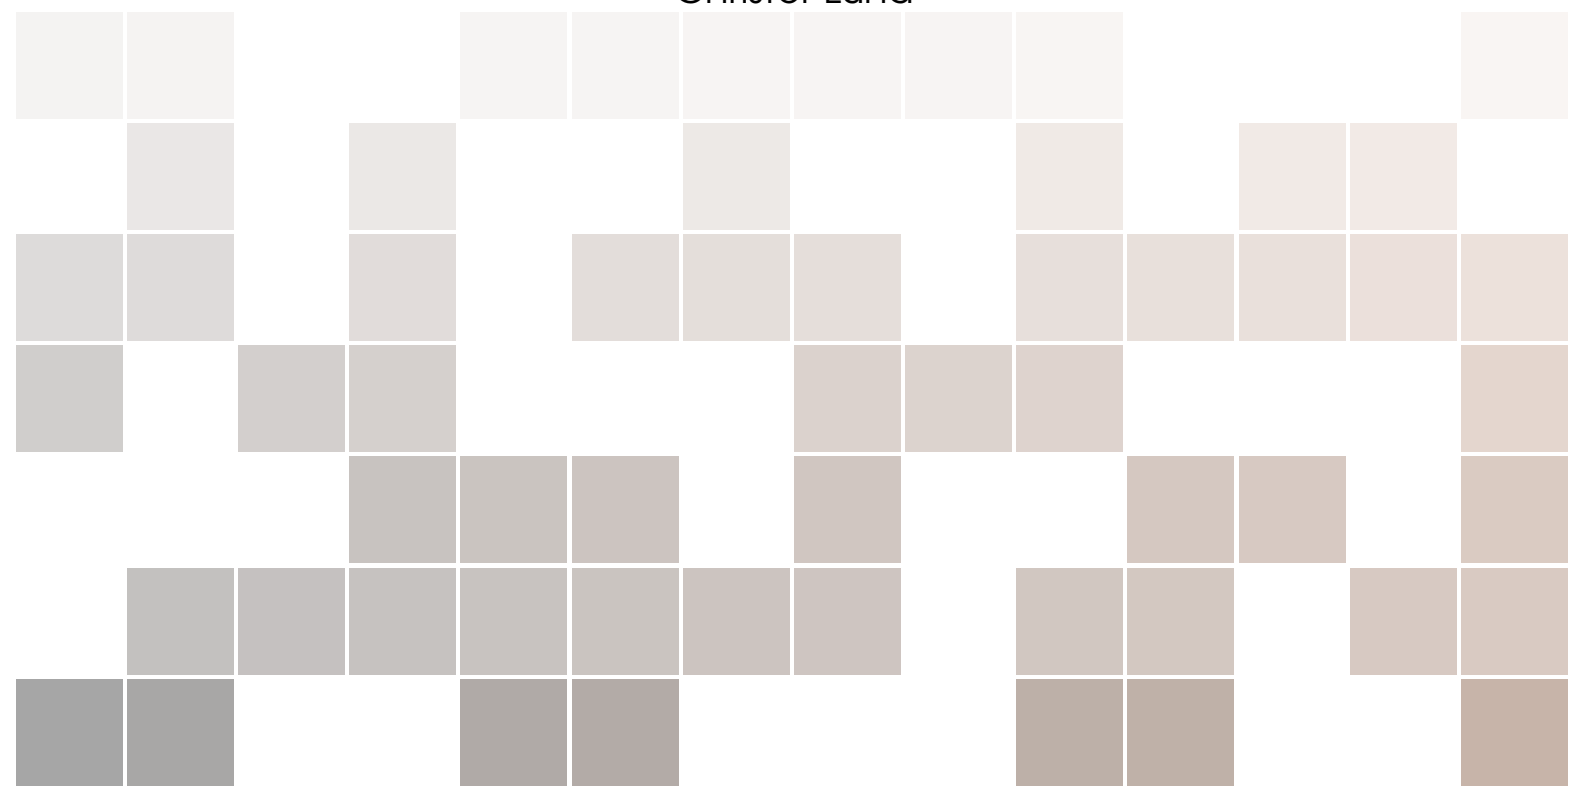

Copyright © 2013 Iver Egge

PUBLISHED BY NULL

WB3.NO

Who needs a license?

The U.S. customary units should have been aborted

*First printing, October 2013*

# Contents

<b>I</b>	<b>Theory</b>	<b>5</b>
<b>1</b>	<b>Tubes and fittings</b>	<b>7</b>
1.1	Tri Clover / Tri Clamp / Sanitary	7
1.1.1	Gaskets	7
1.2	Compression fittings	8
1.3	Valves	8
<b>2</b>	<b>Pump</b>	<b>9</b>
2.1	Requirements	9
2.2	Priming	9
2.3	Mounting	9
2.4	Cavitation	10
<b>3</b>	<b>Sensors and input</b>	<b>11</b>
3.1	Temperature measurements	11
3.1.1	Probes	11
3.1.2	Placement	12
3.2	Flow sensors / Flow meter	12
<b>4</b>	<b>Relays and heatsinks</b>	<b>13</b>
4.1	Electromechanical relays	13
4.2	Solid state relays	13
4.2.1	Zero crossing	13

4.2.2	Calculating heatsink requirements for SSR . . . . .	13
<b>5</b>	<b>RIMS-tube . . . . .</b>	<b>15</b>
5.1	What is RIMS	15
5.2	Components	15
<b>6</b>	<b>Equations and calculations . . . . .</b>	<b>17</b>
6.1	Newtons law of cool'	17
<b>II</b>	<b>Practice</b>	<b>19</b>
<b>III</b>	<b>Bibliography and index</b>	<b>21</b>
	<b>Bibliography . . . . .</b>	<b>23</b>
	Books	23
	Articles	23

**Part I**

**Theory**



# 1 — Tubes and fittings

## 1.1 Tri Clover / Tri Clamp / Sanitary

These fittings are used throughout the brewing system as they provide easy dissassembling and just look really, really cool.

They consist of two flanges and a gasket that are compressed together with a clamp. The clamp is tightened with a thumb screw.

### 1.1.1 Gaskets

There are many types of gaskets produced for use with tri clamp fittings. Three of these types are commonly used in amateur brewing systems; silocone, EPDM (ethylene propylene diene monomer) rubber and PTFE (polytetrafluoroethylene) teflon.

#### Silicone

Temperature rating of  $-49^{\circ}\text{C}$   $\sim 230^{\circ}\text{C}$ .

These are the most common gaskets that are available. They will degrade over time if used with strong acids. As they stick very well to metal and are soft, they provide an excellent seal.

#### EPDM rubber

Temperature rating of  $-34^{\circ}\text{C}$   $\sim 149^{\circ}\text{C}$ .

They have better chemical resistance than silicone gaskets and will last longer than silicone gaskets. As the name implies they are made of rubber and are therefor soft and somewhat sticky.

#### PTFE teflon

Temperature rating of  $-73^{\circ}\text{C}$   $\sim 260^{\circ}\text{C}$ .

They have the best chemical resistance of all gaskets and will last the longest. They are, however, hard and will need considerably more compression to provide a good seal.

#### Gaskets with flanges

A normal gasket will fall right of the fitting when loose. If the gasket has a flange that covers the outer part of the fitting it will stay on the fitting when dissassembling (i.e. does not fall into the warm wort).

**Stiffness**

A stiff gasket that is not sticky will allow you to turn the fitting without disassembling the entire connection. Stiffer gaskets will need more compression to provide a good seal.

**1.2 Compression fittings**

Compression fittings consists of a compression nut and ring that slides over the tube and a threaded fitting. If the tube is made of soft metal there should also be a support insert that is inserted into the tube to prevent it from collapsing.

These fittings should not be over tightened as this will ruin the compression ring and therefore the seal.

**1.3 Valves**

Any normal ball valve will work in a brewing system. Only full port ball valves have the same size hole in the ball as the pipeline.

It should be possible to disassemble the valves for cleaning and repair. Therefore 3-part valves are recommended for a brewing system.



## 2 — Pump

### 2.1 Requirements

A suitable pump for a brewing system have the following requirements

- All parts have to be of food grade.
- It should be magnetic coupled so that in the event of the impeller becoming stuck due to malt particles, the motor will not burn out.
- The lift limit should be at least 2 meters.
- The temperature rating should be at least that of boiling wort (100°C).
- It should be self-priming.

### 2.2 Priming

Priming is to fill the pump head with the liquid that is to be pumped. As the pump is stored dry, the contents of the pump head is only air. As air and water have very different physical properties, a pump that is designed to pump a liquid will perform terrible at pumping air and will eventually break.

A self-priming pump differs from a non-priming pump that it can pump a mixture of air and liquid. This means that the pump will be able to remove air trapped in the head as long as it has a source of liquid.

A pump made to pump liquid should NEVER be run dry.

### 2.3 Mounting

The pump should be mounted so that liquid enters at the bottom of the head and exits at the top. This is to prevent air pockets from occupying the head. If the pump has to be mounted in a vertical position the head should be placed at the top, not the bottom.

Many pumps require that there is pressure at the inlet. Therefore it should be mounted as far as possible below the source of liquid.

## 2.4 Cavitation

Cavitation is the formation of vapor cavities in a liquid due to pressure differences around the impeller as it turns quickly and with great force. It can be harmful to the pump and will produce a rattle-like sound.

## Temperature measurements

Probes  
Placement

Flow sensors / Flow meter

# 3 — Sensors and input

## 3.1 Temperature measurements

### 3.1.1 Probes

There are many different temperature probes available that either communicates digitally or outputs an analog signal that can be processed for use with various microcontrollers. The most common types seem to be

- DS18B20 (digital, Dallas 1-wire)
- LM35 (analog, 0-1V)
- Thermocouple (analog, needs amplifier)

The DS18B20 and LM35 are quite easy to use but lacks good casings for wet use. Thermocouples are the industry standard for temperature measurements and comes in a great number of different casings. They consist of two different types of conductors that provide a voltage difference according to the temperature of the system. This voltage difference is in the order of microvolts and an amplifier is needed to read the output.

#### DS18B20

The DS18B20 comes in a standardized TO-92 packaging. It communicates over the Dallas 1-wire bus that enables several sensors to share a dataline. They can also source power from the dataline so that only two wires are needed for the entire sensor-array. The temperature range of this sensor is  $-55^{\circ}\text{C} \sim 125^{\circ}\text{C}$  and it provides an accuracy of  $\pm 0.5^{\circ}\text{C}$  in the  $-10^{\circ}\text{C} \sim 85^{\circ}\text{C}$  range.

#### Thermocouples

Thermocouples consists of two conductors that differ in physical properties. When these two conductors contact each other they produce a voltage proportional to the temperature difference.

The main disadvantage of thermocouples is that a system error of less than one degree Kelvin is difficult to achieve.

#### K-type thermocouple and amplifier

This seems to be the most common probe of the thermocouples types. It consists of chromel-alumel conductors. The temperature range of the probe can be as wide as  $-200^{\circ}\text{C} \sim 1350^{\circ}\text{C}$ .

The MAX31855 is an amplifier for thermocouples produced by Maxim Integrated. It outputs an analog signal and requires an ADC for use with a microcontroller (or a microcontroller with an integrated ADC). There are libraries available for the Arduino and the Raspberry Pi.

### 3.1.2 Placement

Liquid that is being heated does not have uniformly distributed temperature. There should be two probes per tank, and the average of the two will be the actual temperature of the system. If only one probe is used to measure the temperature of a tank the probe should be fitted at the middle (why?).

## 3.2 Flow sensors / Flow meter

A flow sensor can essentially be as simple as a fan that is rotated by the moving liquid. A magnet on the fan axle moves past a magnetic sensor and produces an electronic pulse on the output line. A microcontroller then records these pulses and is able to calculate the volume of liquid that has passed through the sensor.

These simple flow sensors come in different volume per time ratings.



Electromechanical relays  
Solid state relays  
Zero crossing  
Calculating heatsink requirements for SSR

## 4 — Relays and heatsinks

- 4.1 Electromechanical relays
- 4.2 Solid state relays
  - 4.2.1 Zero crossing
  - 4.2.2 Calculating heatsink requirements for SSR





## 5 — RIMS-tube

### 5.1 What is RIMS

RIMS stands for Recirculating Infusion Mash System.

The wort is recirculated continuously through the malt. The RIMS-tube contains a heating element and a temperature probe that enables the brewer to do step mashing by pumping the wort through the tube. RIMS also provides crystal clear wort as it is filtered continuously through the malt.

### 5.2 Components

A typical RIMS-tube consists of the following

- Two tee's
- A heating element adapter and heating element
- A temperature probe adapter and temperature probe
- Two hose/pipe connections





## 6 — Equations and calculations

### 6.1 Newton's law of cool'



**Part II**

**Practice**



## **Part III**

# **Bibliography and index**





## Bibliography

**Books**

**Articles**

